


OVEN

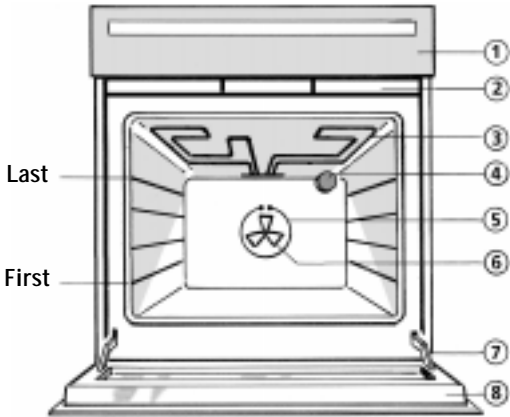


First...Last: Runner positions

- 1. Control panel
- 2. Cooling fan (not visible)
- 3. Dual grill element
- 4. Oven light
- 5. Round heating element (not visible)
- 6. Fan
- 7. Oven door hinges
- 8. Oven door

- Accessories:
- Grid
 - Grill pan set

CONTROL PANEL

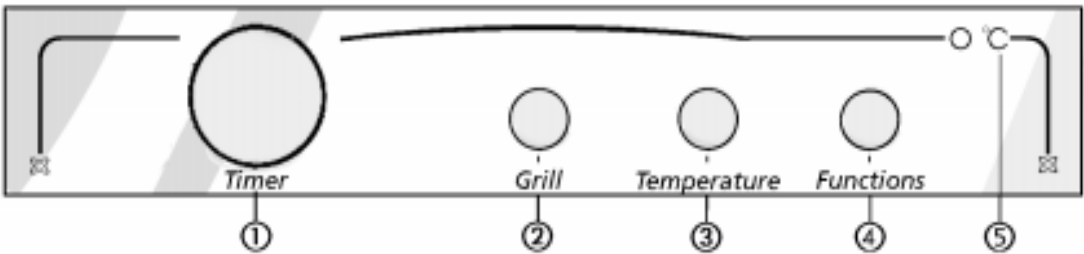

- 1. Mechanical Analog clock
- 2. Grill control knob
- 3. Thermostat control knob
- 4. Functions selector knob
- 5. Temperature red lamp

Important: An optional kit consisting of an oven door glass and of relevant mounting components, is available by the After-Sales Service. The use of the kit reduces the temperature of the outer oven surface and is strongly recommended if there are kids in the house.
Code N°: 4819 310 39186.

OVEN FUNCTIONS

- 0 Off
- Oven light

GRILL FUNCTION

- Use the grill function to cook small pieces of meat (steaks, sausages) and for making toasts.
- The oven door must be closed during the cooking cycle.
 - Preheat the grill for about 5 minutes.
 - Arrange the meat on the grid with the drip tray underneath. Pour water in the drip tray to cover the bottom to reduce smoke and fat spatters.
 - Turn over the meat about half-way through cooking time.

DEFROST FUNCTION

Ideal for thawing frozen food to room temperature.
The food should be inserted in the oven in its wrapping to prevent it from drying out.

DUAL GRILL FUNCTION


- This function has 2 positions: single and dual grill.
- Use the single grill position to grill small quantities of food.
 - Use the dual grill position to grill large quantities of food.
 - During cooking leave the oven door open.
 - Before use, preheat the grill for 5 minutes approx.

FAN FUNCTION

- Use the grill function when cooking food on more than one level (e.g.:fish, vegetables, pasta).
- Choose foods that require the same cooking temperature.
 - Oven preheating is not necessary.
 - Remove the cooked dish and, if necessary, continue cooking the other one for as long as required.




MECHANICAL ANALOG TIMER

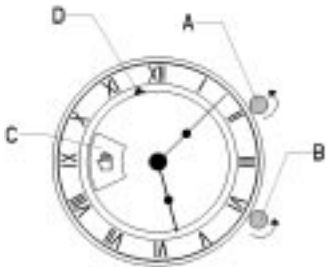- Use this electromechanical timer to:
- 1) View the time of day. To adjust the time, press button (B) and turn it anti-clockwise.
 - 2) Set the cooking start time, which can be delayed by a maximum of 12 hours (e.g. at 7.00 a.m. it's not possible to delay start of cooking until 8.00 p.m. since cooking would actually start at 8.00 a.m.).
 - 3) Set the cooking duration from a minimum of 5 minutes to a maximum of 180 minutes.



SWITCHING ON THE OVEN



MANUAL COOKING (without cooking start time or cooking duration)

- 1) Turn button **(B)** anti-clockwise (without pressing), until the symbol  is displayed in the window **(C)**.
- 2) Press button **(A)** and turn it **anti-clockwise** until the triangle **(D)**  points to the time shown on the clock (hour hand). **The button clicks when turned to the proper position.**
- 3) Turn the selector knob to the required symbol. *The oven light switches on.*
- 4) Turn the thermostat knob clockwise to the required temperature. *The red thermostat indicator light switches on.*
- 5) At the end of cooking, **since it is in manual mode, the oven WILL NOT switch off automatically**; to switch off, turn the thermostat knob and the selector knob to OFF (0 - ).

MANUAL COOKING (with cooking start time but without cooking duration)

- 1) Proceed as per point (1) of the previous paragraph.
- 2) Press button **(A)** and turn it **anti-clockwise** until the triangle **(D)** ► points to the time at which cooking is to start (e.g. in the figure: 11.30).
- 3) Proceed as per points (3), (4) and (5) of the previous paragraph.

COOKING WITH THE TIMER (with cooking start time and cooking duration)

- 1) Turn button **(B) anti-clockwise** (without pressing) until the required cooking duration is displayed in the window **(C)** (5 - 180 min.).
- 2) Press button **(A)** and turn it **anti-clockwise** until the triangle **(D)**  points to the time at which cooking is to start (e.g. in the figure: 11.30).
- 3) Turn the selector knob to the required symbol. *The oven light switches on.*
- 4) Turn the thermostat knob clockwise to the required temperature. *The red thermostat indicator light switches on.*
- 5) At the end of the set cooking time an acoustic signal will sound and the **oven will switch off automatically**. To exclude the acoustic signal, turn button **(B) anti-clockwise** (without pressing) until the symbol  is displayed in the window.
- 6) **At the end of the set cooking time, cooking may be prolonged by following the instructions given above, or by using the manual cooking procedure.**

COOKING WITH THE TIMER (with cooking duration but without cooking start time)

- 1) Proceed as per point (1) of the previous paragraph.
- 2) Press button **(A)** and turn it **anti-clockwise** until the triangle **(D)** ► points to the time shown on the clock (hour hand). **The button clicks when turned to the proper position.**
- 3) Proceed as per points (3), (4), (5) and (6) of the previous paragraph.

[illegible]